


INSTALLATION INSTRUCTIONS

MODEL 88.700 "GLASS" SHOWER DOOR - 24"

MODEL 48.700 "GLASS" SHOWER DOOR - 28"

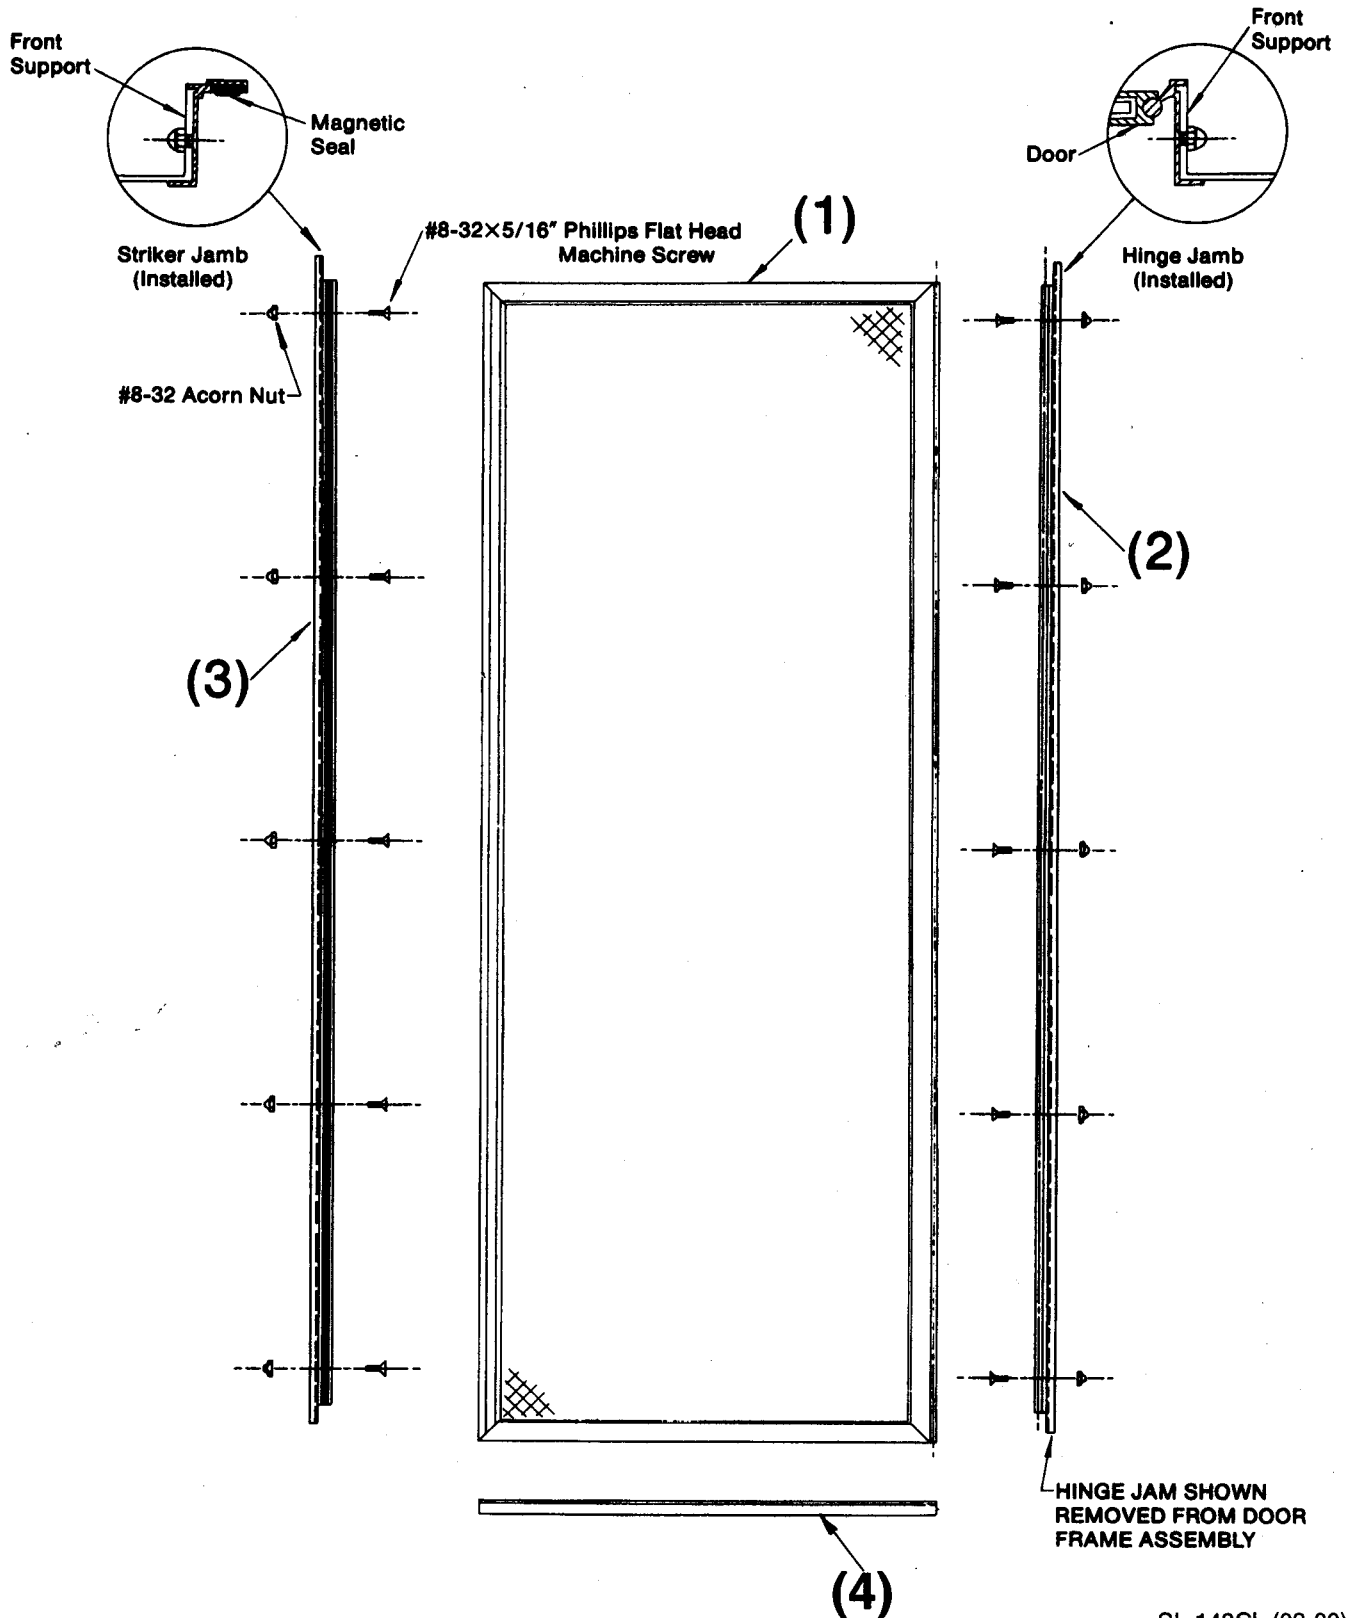

INSTALLATION INSTRUCTIONS

MODEL 88.700 "GLASS" SHOWER DOOR - 24"
MODEL 48.700 "GLASS" SHOWER DOOR - 28"



Read instructions thoroughly before attempting to install Shower Door.
 Refer to Parts Illustration to familiarize yourself with component parts.
 All doors are set up for hinge right installations, as shown. If hinge left is required, do the following:

- A. Remove screw from white nylon bearing, (located on hinge side of door assembly). Remove bearing, replace screw and tighten in place.
- B. Turn door upside down, remove screw that connects hinge side of door assembly to top door frame member, insert nylon bearing, align hole in bearing with hole in door frame, insert screw and tighten in place. Door is now set up for hinge left installation.

Numbers in () parenthesis refer to Key Numbers in Parts List.

1. Set Striker Jamb (3) on threshold making sure it is vertically plumb and properly positioned on front support flange. Locate and mark the five mounting holes. Using the striker jamb as a template, follow the same procedure for the remaining front support. After you have marked both sides, center punch and drill the five holes into each front support, using a 3/16" diameter drill bit.
2. Slide Hinge Jamb (2) into Door Frame Assembly (1) until it is stopped by nylon bearing.
3. Insert Drip Rail Vinyl (4) into bottom of door frame assembly.
4. Mount hinged door assembly to appropriate front support (be sure magnetic seal is to inside of shower stall and door will open outward) by inserting a #8-32 x 5/16" Phillips Flat Head Machine Screw through the hinge jamb, into the front support and securing on inside of shower stall with a #8-32 Hex/Acorn Nut. Follow the same procedure for the remaining four holes.
5. Mount striker jamb with magnetic seal to remaining front support using the #8-32 x 5/16" Phillips Flat Head Machine Screws and #8-32 Hex/Acorn Nuts. Follow the same procedure as outlined in Step 4, above.

PARTS LIST				
KEY NUMBER	PART NO.		DESCRIPTION	QUAN.
	88.700	48.700		
1	88.706	48.710	Door Frame Assembly w/Magnetic Seal	1
2	85.702	85.702	Hinge Jamb	1
3	85.703	85.703	Striker Jamb w/Magnetic Seal	1
4	85.724	45.708	Drip Rail Vinyl	1
			#8-32 x 5/16" Phillips Flat Head Machine Screw	10
			#8-32 Hex/Acorn Nut	10

NOTE: FOR REPLACEMENT HARDWARE, ORDER COMPLETE PARTS PACKAGE - PN 85.710. PACKAGES WILL NOT BE SPLIT FOR INDIVIDUAL ITEMS.

THIS SHEET IS AN ASSEMBLY AID, NOT A PACKING LIST

Should you have any problems with this Shower Door, please contact us at:

COASTAL INDUSTRIES, INC.
 P.O. Box 16901
 Jacksonville, FL 32245
 Phone: 1-800-874-8601
 Fax: 1-904-641-1697



Quality Plumbing Products

E.L. MUSTEE & SONS, INC.

5431 West 164th Street • Cleveland, Ohio 44142

SI- 148CL (03-00)